



FLOOR PACK - HNZPS42

BASE SIZE: 1.520 X 0.685

DESCRIPTION	QTY	LENGTH	CHECKED
Floorboards 25 x 150, H3	10	0.685	

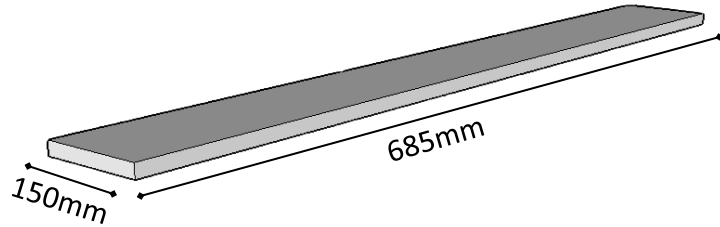

DESCRIPTION	QTY	LENGTH	CHECKED
Joists 45 x 45 H4	1	1.430	

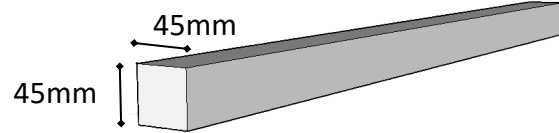

DESCRIPTION	QTY	LENGTH	PACK WEIGHT	CHECKED
Nails	60	50mm	176g	
Nails	6	75mm	30g	





PACKED BY:

DATE: / /

FLOOR INSTALLATION & SHED ANCHORING

FITTING A HNZPS FLOOR KIT (OPTIONAL)

- Position the Floor Joists centrally between the side Base Plates and skew nail each end with two 75mm nails.
- Check that the shed is sitting level and square. Check that the diagonal Bottom Plate measurements are the same. This ensures that the shed base is square.
- Place the Floor Boards in position.

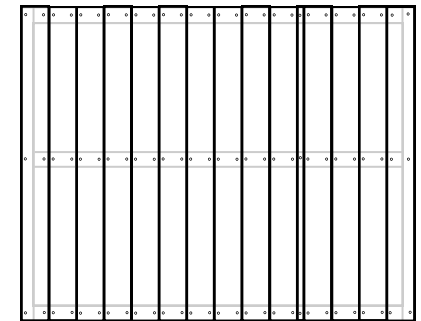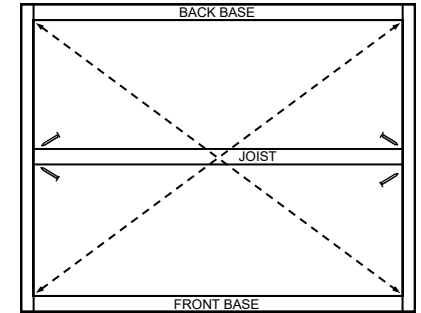

Secure your shed using Treated Timber Pegs or a Bolt Down Kit

PEG DOWN KIT FOR SOFT SURFACE ANCHORING

- The optional Duratuf Timber Peg Down Kit includes six H5 treated timber pegs that can be hammered into the ground and then attached to the Base Plate with stainless steel screws. A HNZPS timber floor can then be fitted on top of the Base Plate if required.



BOLT DOWN KIT FOR CONCRETE ANCHORING

- The optional Duratuf Bolt Down Kit includes 6 x galvanised brackets, screws and dynabolts.
- Space the brackets evenly around the shed and fix to the Bottom Plate and the concrete slab. A 10mm masonry drill bit is required.

