



# FLOOR PACK - SENTRY HNZSL1507

BASE SIZE: 1.520 X 0.685m

DESCRIPTION	QTY	LENGTH	CHECKED OUT	CHECKED IN
Floorboards 25 x 150, H3	11	0.685		

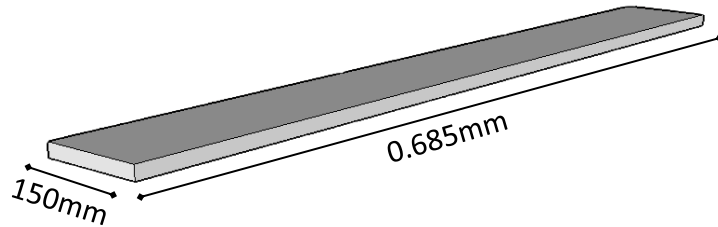

DESCRIPTION	QTY	LENGTH	CHECKED OUT	CHECKED IN
Joists 45 x 45 H4	1	1.430		

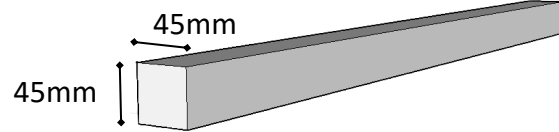

DESCRIPTION	QTY	LENGTH	CHECKED OUT	CHECKED IN
Nails	60	50mm		
Nails	6	75mm		



PACKED BY:

DATE: / /



# ANCHORING - SENTRY HNZSL1507

Secure your shed using Treated Timber Pegs or a Bolt Down Kit

## BOLT DOWN KIT—CONCRETE PAD

- The optional Duratuf Bolt Down Kit includes 6 x galvanised brackets, screws and dynabolts.
- Space the brackets evenly around the shed and fix to the Bottom Plate and the concrete slab. A 10mm masonry drill bit is required.



## OPTIONAL SENTRY FLOOR

- Position the Floor Joists centrally between the side Base Plates and skew nail each end with two 75mm nails.
- Check that the shed is sitting level and square and that the diagonal Bottom Plate measurements are the same.
- Place the Floor Boards in position. (You may need to cut the last Floor Board to the correct width using a Skill Saw.) Nail each Floor Board in, using two 50mm nails each end and two nails into each floor joist.

