



FLOOR PACK - SENTRY HNZSL2015

BASE SIZE: 2.020 X 1.520m

DESCRIPTION	QTY	LENGTH	CHECKED OUT	CHECKED IN
Floorboards 25 x 150, H3	14	1.520		

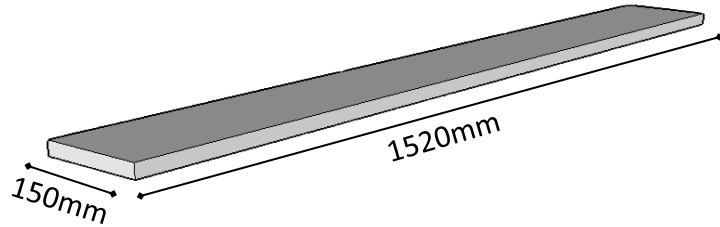

DESCRIPTION	QTY	LENGTH	CHECKED OUT	CHECKED IN
Joists 45 x 45 H4	2	1.930		

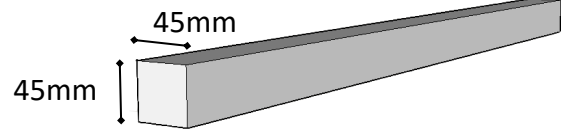

DESCRIPTION	QTY	LENGTH	CHECKED OUT	CHECKED IN
Nails	115	50mm		
Nails	12	75mm		



PACKED BY:

DATE: / /



ANCHORING - SENTRY HNZSL2015

Secure your shed using a Duratuf Bolt Down Kit

BOLT DOWN KIT—CONCRETE

- The optional Duratuf Bolt Down Kit includes 6 x galvanised brackets, screws and dynabolts.
- Space the brackets evenly around the shed and fix to the Bottom Plate and the concrete slab. A 10mm masonry drill bit is required.



OPTIONAL SENTRY FLOOR

- Position the Floor Joists centrally between the side Base Plates and skew nail each end with two 75mm nails.
- Check that the shed is sitting level and square and that the diagonal Bottom Plate measurements are the same.
- Place the Floor Boards in position. (You may need to cut the last Floor Board to the correct width using An electric saw.) Nail each Floor Board in, using two 50mm nails each end and two nails into each floor joist.

