



FLOOR PACK - SENTRY HNZSS1510

BASE SIZE: 1.520 X 1.020m

DESCRIPTION	QTY	LENGTH	CHECKED OUT	CHECKED IN
Floorboards 25 x 150, H3	11	1.020		

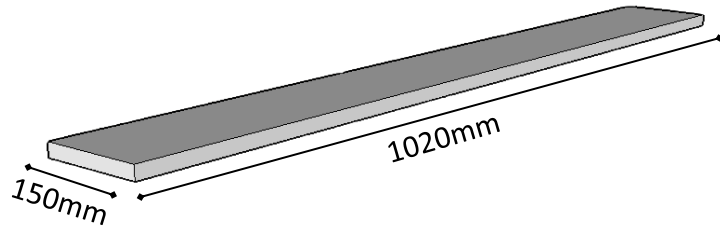

DESCRIPTION	QTY	LENGTH	CHECKED OUT	CHECKED IN
Joists 45 x 45 H4	1	1.430		

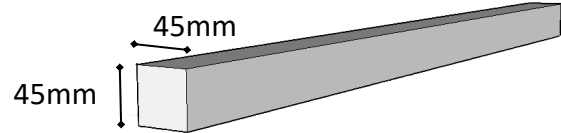

DESCRIPTION	QTY	LENGTH	CHECKED OUT	CHECKED IN
Nails	60	50mm		
Nails	6	75mm		



PACKED BY:

DATE: / /

Duratuf
SENTRY SHEDS®

ANCHORING - HNZSS1510 SHED

Secure your shed using Treated Timber Pegs or a Bolt Down Kit

TIMBER PEGS—WOODEN FLOOR

- The optional Duratuf Timber Peg Down Kit includes six H5 treated timber pegs that can be hammered into the ground and then attached to the Base Plate with stainless steel screws. A Sentry timber floor can then be fitted on top of the Base Plate.



BOLT DOWN KIT—CONCRETE SLAB

- The optional Duratuf Bolt Down Kit includes 6 x galvanised brackets, screws and dynabolts.
- Space the brackets evenly around the shed and fix to the Bottom Plate and the concrete slab. A 10mm masonry drill bit is required.



OPTIONAL SENTRY FLOOR KIT

- Position the Floor Joists centrally between the side Base Plates and skew nail each end with two 75mm nails.
- Check that the shed is sitting level and square and that the diagonal Bottom Plate measurements are the same.
- Place the Floor Boards in position. (You may need to cut the last Floor Board to the correct width using a Skill Saw.) Nail each Floor Board in, using two 50mm nails each end and two nails into each floor joist.

